POJJO®
Making wires disappear

Assembly Instructions
Vanity Valet Boutique

Pieces (Inside)

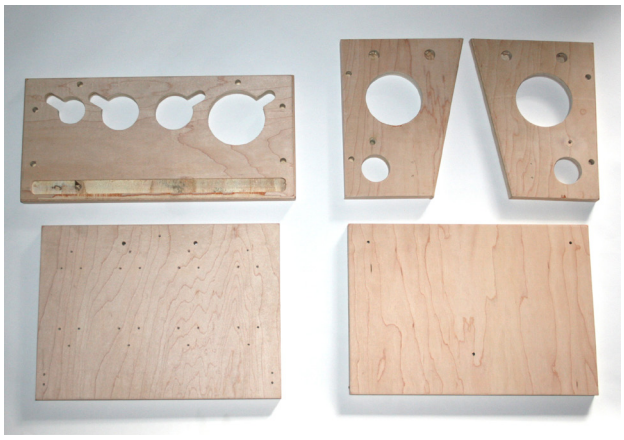

Pieces (Outside)

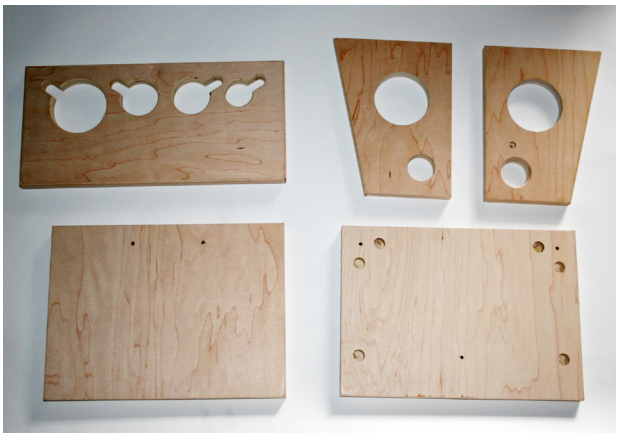

Step 1: Add cams to all circular holes

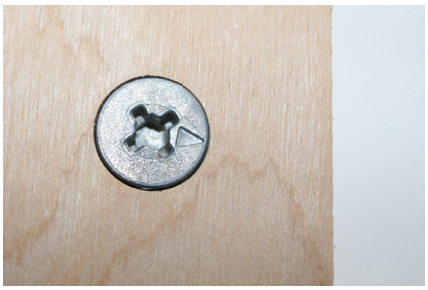

Cam placed inside hole

Arrow must point towards hole

Backside of back panel uses 6 cams

Step 2: Prepare the sides

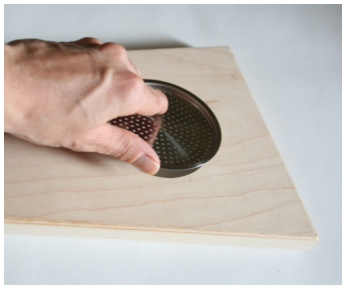

Add Vent to 3” hole in side

Glue vent to each side from the inside

Add dowel

Add hinges

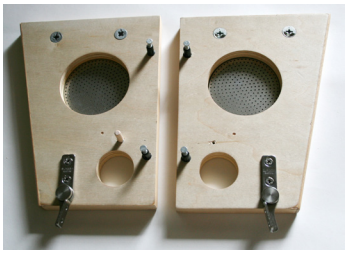

Add arms to sides and now complete

Instructions
Vanity Valet Boutique

Step 3: Attach sides to back

Cam placed inside hole

Backside of back panel uses 6 cams

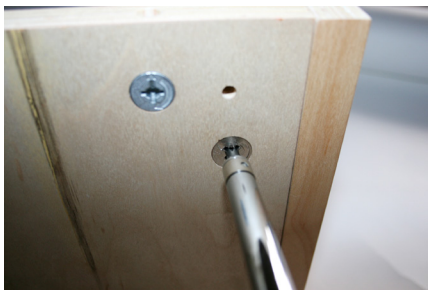

Turn cams on back to lock the side and back

Step 4: Attach top to base

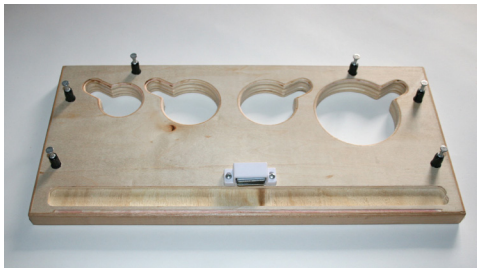

Add all arms to top and magnet

Place arms in hole and attach lid to base

Turn cam on inside and back to lock top, side, and back

Step 5: Prepare the door

Screw all knobs to the panel

Add hook velcro between knobs

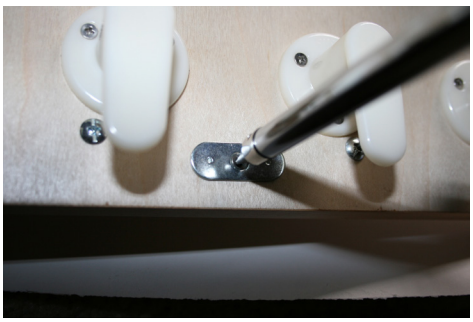

Screw magnetic clasp

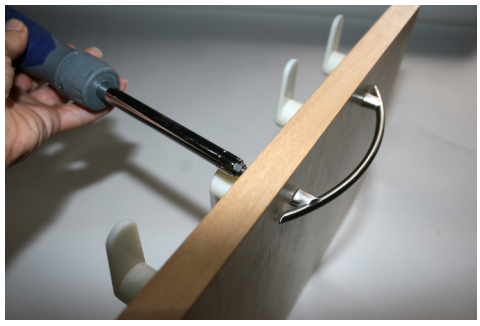

Add handle

Attach door to sides with hinge

Attach roller

Add appliances then tubes